OBABY
www.obaby.co.uk

# Instruction Manual
## Winnie The Pooh Stroller

Pooh bear

Disney

**IMPORTANT** PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE USING THIS PRODUCT
KEEP FOR FUTURE REFERENCE

Thank you for choosing Obaby. To ensure that your stroller is used in accordance with these instructions, please read them fully.
This stroller conforms to EN 1888:2003 and is guaranteed for 12 months from the date of purchase against manufacturing defects. If, however you have any problems, please contact your Obaby retailer from whom you purchased your product, who will take appropriate action.

Your child's safety may be affected if you do not follow these instructions.

WARNING: A child's safety is your responsibility

WARNING: Ensure that all locking devices are engaged before use

WARNING: Children should be harnessed in at all times

WARNING: Always use the crotch strap in combination with the waist belt

WARNING: Any load attached to the handles affects the stability of the pram / pushchair

WARNING: This product is not suitable for running or skating

WARNING: It may be dangerous to leave your child unattended

WARNING: The child should be clear of moving parts while making adjustments or opening or folding the stroller. Risk of serious injury (entrapment, laceration or amputation) exists

- A basket is provided for the carriage of other items up to a maximum permissible weight of 3 kg. Where a hood parent pocket is provided, an additional 1kg maximum permissible weight can be used within this

- This stroller is intended to carry one child from birth and up to a maximum weight of 15kg

ROUTINE CARE & MAINTENANCE

- This stroller requires regular maintenance by the user
- It may be unsafe to use replacement parts or accessories e.g. child seats, bag hooks, rain covers, etc, other than those approved by the manufacturer or distributor.
- For cleaning, use only a mild detergent and warm water
- DO NOT USE BLEACH
- DO NOT USE any abrasive substances
- From time to time, check your stroller for loose screws, worn parts, torn material or stitching. Replace or adjust the parts as needed.

Due to constant updating and improvements, some components may occasionally differ slightly from the images shown in these instructions. We reserve the rights to change the specifications of any products without prior notice. If you need any assistance please contact your Obaby retailer from whom you purchased your product, who will take appropriate action.

fig. 1

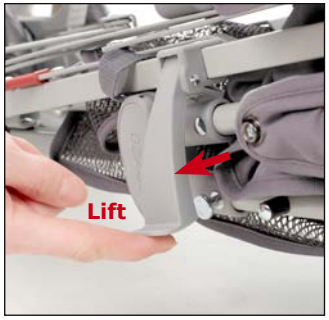

fig. 2

fig. 3

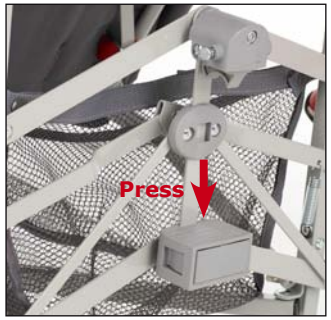

fig. 4

fig. 5

fig. 6

To open your stroller release the storage clip on the side of the stroller (fig.1 & 2).
Lift the handles away from the wheels (fig.3).

Using your foot push down on the primary release lock at the back of the stroller (fig.4).
Ensure the lock clicks into place (fig.5 & 6).

⚠ WARNING: Ensure that all locking devices are engaged before use





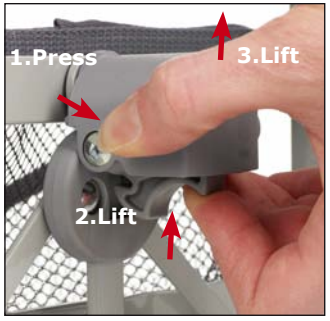

fig. 7

fig. 8

fig. 9

fig. 10

fig. 11

Before attempting to fold your stroller
- The front wheels should be locked in place
- The basket and seat unit should be empty
- The hood should be folded
- The seat should be fully upright

To fold the stroller, release the primary lock, at the back of the stroller by pushing in the spring loaded button, while lifting the lever underneath (fig.7). Then lift the whole catch upwards slightly using your hand.

Next, using your foot press down on the secondary lock at the right hand side of the stroller (fig.8). Then push the handles forwards and down towards the front wheels (fig.9), until completely folded (fig.10). Engage the storage clip on the front leg of the stroller (fig.11).

## Fitting and Removing the Front Wheels

fig. 12

fig. 13

fig. 14

To fit the front wheels, push the wheels onto the front legs until they click into place.
To Remove, Pull both clips apart whilst pulling the wheel off the leg.

## Using the Front Swivel Wheels

fig. 15

fig. 16

fig. 17

To lock the swivel wheels, first ensure the front wheels are facing forward inline with the chassis, then lift the lever up (fig.15).

To put the wheels in swivel mode, push the lever down on the front of each front wheel (fig.16 & 17).





## Applying the Brakes

fig. 18

fig. 19

fig. 20

To lock the brakes fully, push down on each brake lever using your foot (fig.18 & 19).
To release the brakes, lift each brake lever using your foot (fig.20).

Apply the brake before putting your child into the pushchair.
Apply the brake when the pushchair is stationary.

## Adjusting the Backrest

fig. 21

fig. 22

fig. 23

To recline the backrest, press the button on the toggle and pull away from the seat to the desired height (fig.21). Lower the seat to rest on the toggle (fig.22).

To put upright, grip the sides of the toggle with one hand, and the strap with the other hand and slide the toggle up the strap to the desired height (fig.23).

fig. 24

fig. 25

fig. 26

To fit the hood, place the hood on the chassis, inline with the seat unit. Clip the hood catches onto each side of the chassis (fig.24-26). Ensure the Clip fits into the Locating hole on the Chassis frame, this stops the hood clip from sliding.

To remove the hood, do the reverse of the above.

## Adjusting the Hood

fig. 27

fig. 28

fig. 29

To open or close the hood, pull or push the hood, as shown. (fig.27-29).

fig. 30

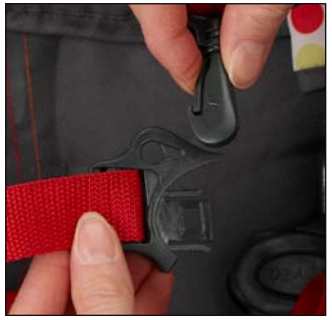
fig. 31

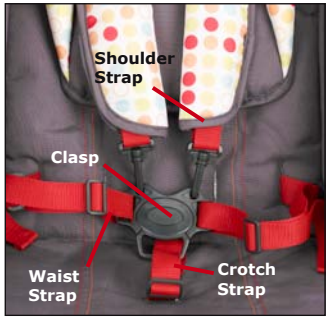

fig. 32

fig. 33

fig. 34

fig. 35

To fasten the harness, clip each chest strap onto the waist strap (fig.30) and insert both fasteners on the waist strap into the clasp on the crotch strap (fig.31 & 32).

To release the harness, press the centre of harness clasp (fig.33).

Adjust the harness length using the buckles on each strap (fig.34).

'D' Ring
The 'D' rings highlighted are provided for fitting a separate harness complying with BS 6684 (fig.35).

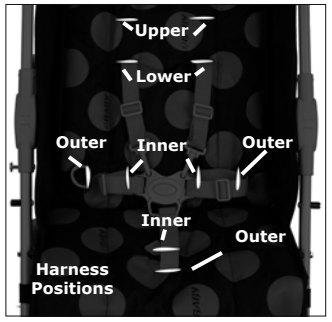

fig. A

When using the safety harness from birth, it may be necessary to use the lower holes for the shoulder strap and the inner holes for the waist straps and crotch strap.
Higher holes for the shoulder strap and outer holes for the waist straps and crotch strap should be used when your child is of a suitable size. (See fig.A)

WARNING: Always use the crotch strap in combination with the waist belt

## Adjusting the Calf Rest

fig. 36

fig. 37

fig. 38

To adjust the calf rest press the levers either side of the seat and lift or lower to the correct position (fig.36-38).

## Fitting the Raincover

fig. 39

fig. 40

fig. 41

To fit the raincover, place the raincover over the stroller and allow the raincover to drape over the front of the stroller.
Secure in place using the velcro tabs on the back of the raincover (fig.39) and velcro straps onto the front legs of the stroller (fig.40 & 41).

WARNING: When using the raincover, regularly check your child has adequate ventilation and is not overheating.
Unless it is raining, the raincover should be removed.



www.obaby.co.uk

©Disney
Based on the "Winnie the Pooh" works by A.A Milne and E.H. Shepard.